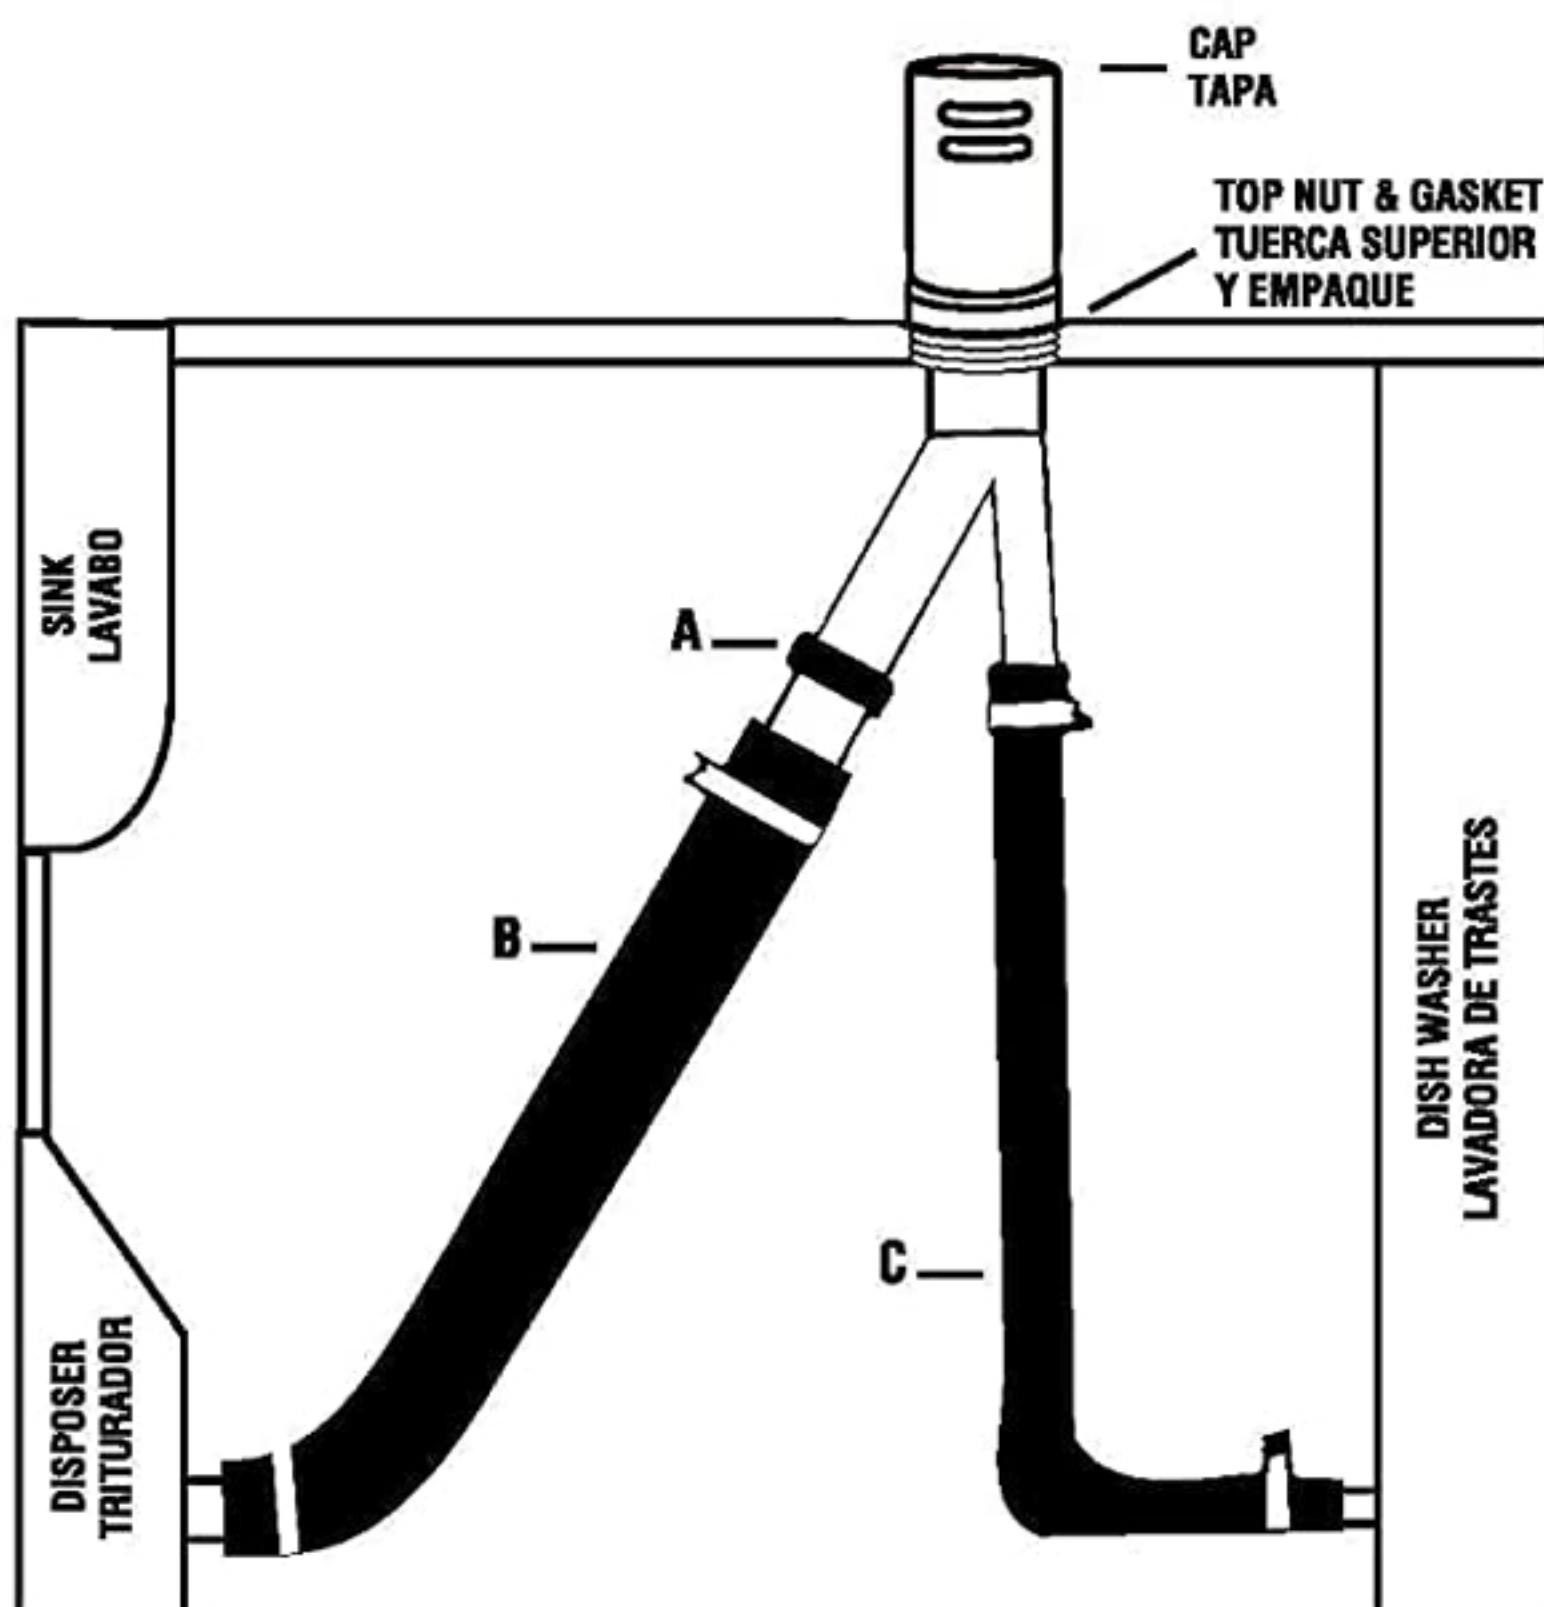


INSTRUCTIONS:

1. Connect 7/8" outlet hose (B) to air gap using #16 worm gear clamp, leaving other end loose. Then connect dishwasher 5/8" discharge hose (C) to air gap using worm gear clamp. Avoid kinking hoses.
2. Push air gap threaded neck through deck hole. Adjust nut so threads protrude not more than 1/2" above sink top.
3. Connect air gap outlet hose to disposer or to dishwasher tailpiece above the water level of sink trap; use #16 worm gear clamp. Avoid any low spots that could trap water. Install top washer and top nut. Slip on cap with relief opening facing wall.

**INSTRUCCIONES:**

1. Conecte la manguera de salida de 7/8 de pulgada (B) al intervalo de aire con una abrazadera gusano de engrane #16, dejando el otro extremo suelto. Luego conecte la manguera de la lavadora de trastes de 5/8 de pulgada (C) al intervalo de aire usando una abrazadera de engranaje de gusano. Evite enrollar las mangueras.
2. Empuje el cuello roscado del boquete aéreo a través del agujero de la cubierta. Ajuste la tuerca para que las rosas no sobresalgan más de 1/2 pulgada arriba del borde del lavabo.
3. Conecte la manguera de salida del boquete aéreo a el triturador o al tubo de la lavadora de trastes arriba del nivel del agua de la trampa del lavabo; use una abrazadera de engranaje de gusano #16. Evite cualquier punto bajo que pudiera detener agua. Instale la arandela y la tuerca superior. Coloque la tapa con la abertura dirigida hacia la pared.

AG100 & AG102 Installation Instructions